

**Seek**<sup>TM</sup>  
thermal

# Reveal Shield**PRO**<sup>TM</sup>

## USER MANUAL



**RH BRANDBEVEILIGING**


*WIJ HELPEN U UIT DE BRAND!*

## TECHNICAL SUMMARY

---

SPECIFICATIONS	DESCRIPTION
Thermal Sensor	320 x 240
Detection Distance	825 Yards (758 Meters)
Recognize Distance	200 Yards (190 Meters)
Identify Distance	115 Yards (108 Meters)
Field of View	24 Degree FOV
Frame Rate	9 Hz or 30 Hz
Zoom	4X Digital Zoom
IP Rating	IP67 Waterproof
Display	2.4" Color with Corning® Gorilla® GlassUncooled
Microbolometer	Vanadium Oxide
Startup Time	2-3 Seconds
Spectral Range	7.5 - 14 Microns
User Interface	Self-Contained Device with 3 Button Navigation
Storage Temp	-40 to 140F (-40 to 60C)
Operating Temp	-40 to 120F (-20 to 50C)
Runtime	Up to 3.5 Hours Thermal Imaging
Battery	Rechargeable Lithium Battery

For support and user guides visit [support.thermal.com](http://support.thermal.com)

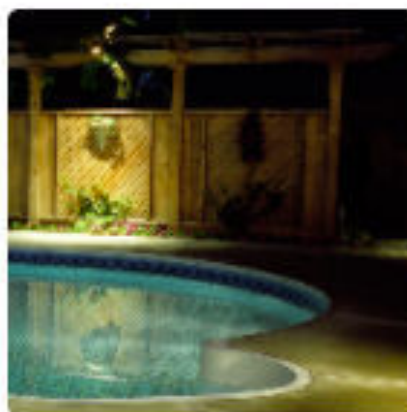

# *Table of Contents*

1	Schematic/ Features
2	Getting Started
2.1	What's in the Box
2.2	Charging the Battery
2.2	Setting up your Device
3	Navigation/Operation
3.1	Display Banner
3.2	Modes
3.3	Photo Capture
3.4	Zoom
3.5	Flashlight Operation
4	Modes
4.1	Night
4.2	Search
4.3	Locate
5	Advanced Settings
5.1	Gallery
5.3	Startup Mode
5.4	Default Brightness
5.5	Default Night Mode
5.6	Device
5.6.1	Date & Time
5.6.2	Language
5.6.3	Auto off
5.6.4	Flashlight
5.6.5	Watermark
5.6.6	Restore
5.7	About
6	Cleaning & Maintenance
7	Support


# 1 Schematic/Features

GETTING TO KNOW YOUR

## Reveal ShieldPRO™



**Single click for full screen thermal**  
Einzelklick für Vollbild-Thermal  
Un seul clic pour le plein écran thermique

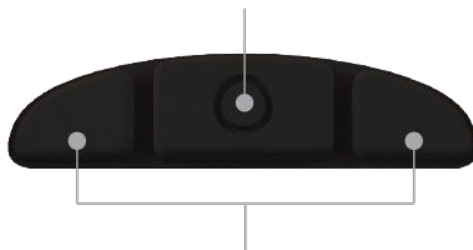

**Press and hold Left and Right buttons for settings menu**  
Drücken und halten Sie die Links und Rechts Tasten für  
das Einstellungs Menü  
Appuyez et maintenez pour le menu des paramètres

## 2 Getting Started

---


*The Reveal ShieldPRO is Seek Thermal's latest personal TIC designed and tested for law enforcement and border patrol personnel. This product is not available to the general public and is intended to help these parties enforce the law, and better serve and protect the people.*

### 2.1 What's in the Box

Inside your box, you will find a ballistic nylon holster for your Shield, the thermal camera, and micro USB cable to charge the device. Lift camera and insert tray for a welcome guide that provides additional information about your thermal camera and its unique specifications & attributes.

### 2.2 Charging the Battery

Before you turn on the device, you're going to want to charge it. For the best results, charge your Reveal ShieldPRO using the included USB cable. When the thermal camera is 'off', the Battery Charging screen will appear. The battery charge level will only appear when plugged in and the **LEFT** or **RIGHT** buttons are pressed.

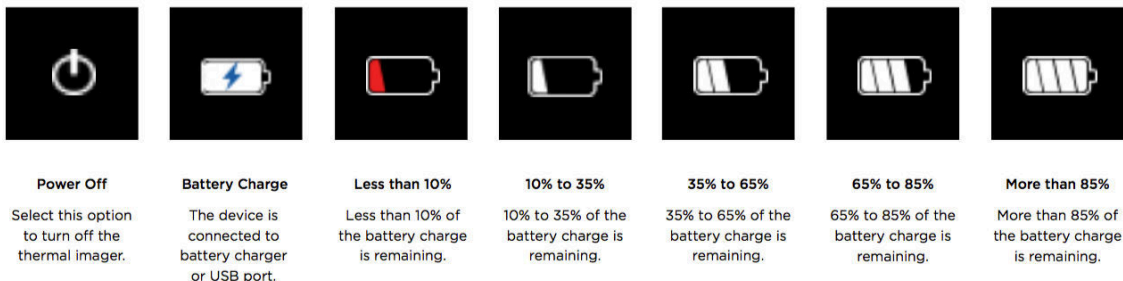

**NOTE:** *This device will provide up to 3.5 hours of imaging time with a full charge.*

### 2.3 Setting up your device

To turn on your device, press the **CENTER** button until the display lights up.

You will be directed to a screen that asks you to set up some basic information, including language, and date & time formats. Using the **RIGHT** and **LEFT** buttons, scroll down/up and highlight the appropriate fields, using the **CENTER** button to select and continue, concluding with the 'setup complete' screen.

To switch the device off, press and hold down the **CENTER** button for 2 seconds until screen goes dark.

# 3 Navigation/Operation

---

*Reveal ShieldPRO has been designed to help you maintain stealth during operations and missions. One thing you will notice from the start is that the default display brightness has been set very low to maintain discretion while using it in darkness. The lower status bar at the bottom of the display indicates the current magnification of the camera, the brightness percentage of the display, and the battery level icon from left to right.*

## **Basic Functions:**

### **3.1 Display Banner**

To toggle the above information on and off, simply press the **CENTER** button.

### **3.2 Modes**

To switch between different thermal modes, press and release the **LEFT** button until you find your desired filter.

### **3.3 Photo Capture**

To take a photo, press and release the **RIGHT** button, and a white border will briefly freeze frame around the display. Capture is instantaneous, so there is no need to worry if you accidentally move or shift the cameras view once you have pressed the button.

### **3.4 Digital Zoom**

To adjust your camera's zoom, press and hold the **LEFT** button. An icon displaying the zoom's numerical value will appear towards the left center of the display and begin increasing from 1x-4x until released. Your camera will hold its current zoom until you hold the button down past 4x, at which point it will reset to 1x and start rising again.

### **3.4 Brightness Adjust**

To adjust your displays brightness, press and hold the **RIGHT** button. The display brightness will jump from its default setting minimum up to 20%, and will subsequently increase in 20% increments up to 100% brightness. Your camera will retain its current brightness until you hold the button down past 100%, at which point it will reset to min and start rising again.

### **3.5 Flashlight Operation**

Pressing the **SIDE** button on your Shield unit will turn on a 300 lumen LED, located beside the lens at the front of the camera. Press the button four times to switch between its 'High' 'Low' and "Strobe light" and "Off" settings.

# 4 Modes

---

*Reval ShieldPRO has been designed with three unique modes to help facilitate specific tasks for law enforcement officers. Whichever mode you choose will ultimately be contingent on the situation at hand as well as personal preference.*

## 4.1 Night

The default startup mode for the Shield and is a RED color palette set at minimum brightness. This is a “search” mode that has been designed for imminent danger / threat situations, when you don’t want to be front lit by the screen while preserving your night vision. In your advanced settings menu (See page 9) the color scheme can be additionally altered to blue, green, or copper.




## 4.2 Search

Designed for general search purposes when there is no imminent danger. This high contrast mode may help to find or observe subjects-of-interest in the majority of non-hostile/low risk situations



## 4.3 Locate

This is an additional search mode designed to quickly help pinpoint suspects. Some users may find it easier to acquire subjects-of-interest with this high contrast color mode.

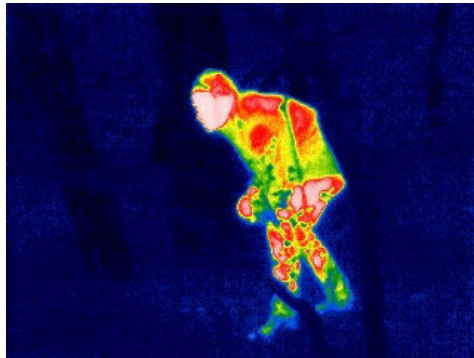



# 5 Advanced Settings

---

*Beyond the Shield's simple and intuitive user interface there are a host of settings that can be customized to your preference. To gain access to the advanced menu, press and hold the **LEFT** and **RIGHT** button simultaneously for 2 seconds and you will be directed to the following screen*

***NOTE:** While in advanced settings menu, holding down the **LEFT** or **RIGHT** button will do nothing to alter the zoom or brightness of your screen. You will be redirected from the advanced menu screen back to active imaging after 20 seconds of inaction.*

## **Advanced Menu Features:**

### **5.1 Gallery**

Select this field to gain access to your devices image gallery and view all thermal images you have taken. You may delete any existing image by pressing the **CENTER** button which will give you the option to 'delete' the existing image, 'cancel' the action bar, or 'exit' back to active imaging.

### **5.3 Startup Mode**

This field will allow you to set which thermal mode your camera will use when you first turn it on. Choose between Night, Search, and Locate depending on which application you most commonly use your camera for.

*Note: Default is set to **NIGHT** mode at the factory.*

### **5.4 Default Brightness**

This field enables you to adjust the brightness of the display when the unit is powered on. Choose between minimum, 20, 40, 60, 80 or 100% brightness depending on the time of day which you most commonly use your camera.

*Note: Default is set to minimum at the factory.*

### **5.5 Default Night Mode**

This field lets you alter the color scheme of your Night Mode Red LUT to Copper, Green or Blue.

*Note: Default is set to **RED** at the factory.*

### **5.6 Device**

Selecting this field opens the Device menu which gives you access to a variety of settings you first set up when you power on the device for the first time, restore, or hard reset.

### **5.6.1 Date & Time**

This option allows you to go back and adjust formats selected when you first set up the device. You may change time between military and standard time, and preferred date format.

### **5.6.2 Language**

Choose between English, Spanish, French, German, Dutch, Italian, Portuguese, Polish, Korean, Chinese, and Japanese as your camera's native language.

### **5.6.3 Auto OFF**

Selecting this field will allow you to modify the time which your device will automatically switch off at between minimum 5, 10, 15, 20 minutes and OFF.

### **5.6.4 Flashlight**

Selecting flashlight will give you the option to adjust the brightness of your 300 lumen LED on the front of the camera between 60, 80, and 100% in "High", and 5, 20, and 40% in "Low". The "Strobe" option for the light can be set to 'on' or 'off'.

### **5.6.5 Watermark**

In the bottom, left-hand corner of the screen during active imaging the Seek Thermal Watermark will appear, and also show up when you review your images. Select this field if you would like to switch the watermark "on" or "off".

### **5.6.6 Restore**

To restore and reboot your device to its factory settings you will be asked "continue" by selecting "ok". This action will not affect any stored data in your gallery, but will require you to re-input information first selected when you set up the device.

## **5.7 About**

Provides Serial and Firmware information of your camera, including the model, serial number, software, build, and link to software updates.

## 6 Cleaning & Maintenance

---

*At times, thermal images may begin to look cloudy or low quality despite having a focused camera. This may be due to particles of dirt on the lens. Cleaning your camera lens may help to clear up images and give higher quality images.*

Required materials for cleaning: • Q-tip • isopropyl alcohol

1. Apply small amount of isopropyl alcohol to the clot of the Q-tip until slightly damp.
2. Use the Q-tip to lightly rub the reflective inner lens of the camera until clean.
3. Lightly pat and dry the lens with a clean cloth and let air dry.

**NOTE:** Never use window cleaners, harsh chemicals, or cleaning solvents on your Shield.



## 7 Support

---

